


Work Box Installation - Flush Mount

Any questions call Tradesman Truck Accessories at 866-789-5300

- This Work Box is designed to set flush mount on the bed of the truck.
- Holes made in the bottom of the Work Box must be sealed to prevent water seeping into the box when water gets in the truck bed.
- Location and style of fasteners is at the discretion of the customer and are not included.

Installation Steps:


1. Align the Work Box in the bed of the truck.
2. Insert 3/8" washers over 3/8" hex-head screw.
3. Screw at the bottom corner of each side of the Work Box. See Figure 2

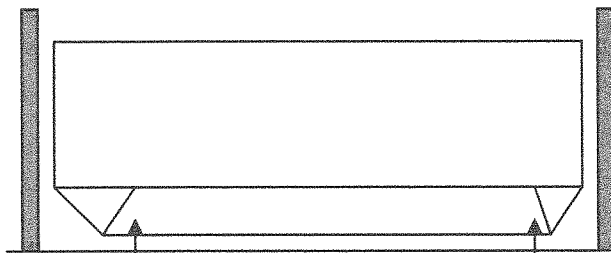

Recommended screw positioning


Parts & Tools Needed

Not Included!

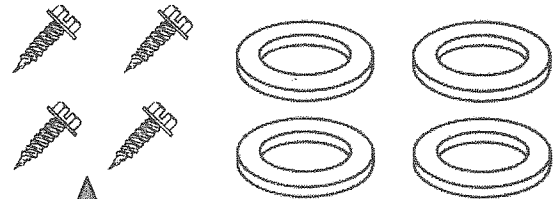


4 - self-tapping screws


4 -Rubber
Washers

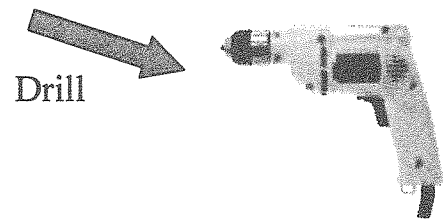

Drill

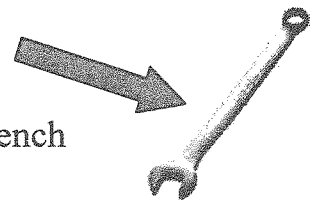

3/8" Wrench

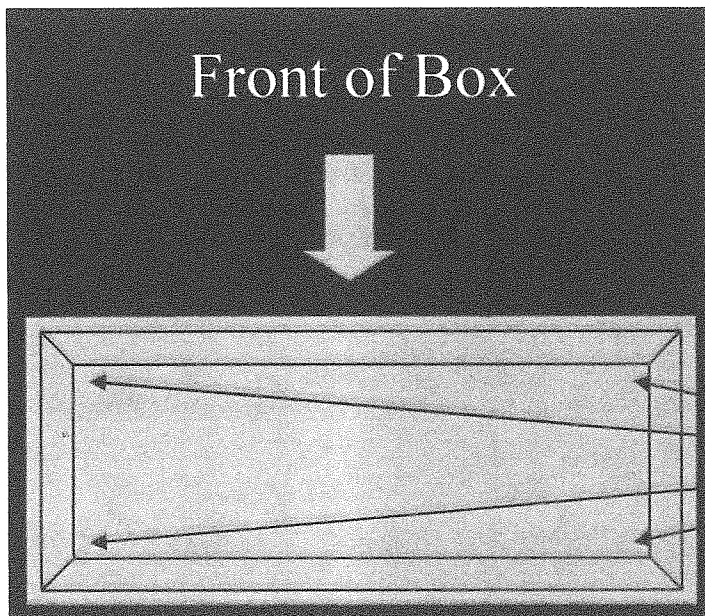

Front of Box

Figure 2

Insert washers and
screws.